



Installation Top-Fixation **without** sound insulation

Item A10279



PRESSALIT®

Assembly instructions for flow reducer

The flush flow reducer should only be used if the flush pressure is too high and over-splashing occurs during flushing. The throttle is simply inserted into the inlet pipe to the WC. Depending on the position, this results in a reduction of 30-40%.

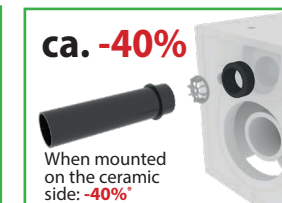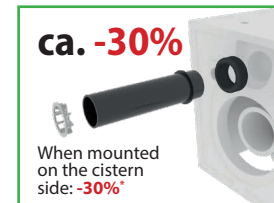

* Figures are approx. values

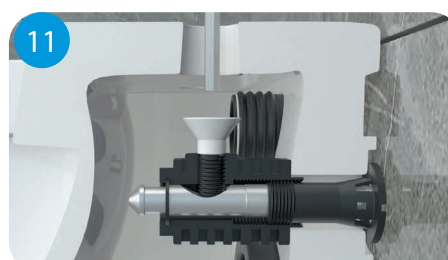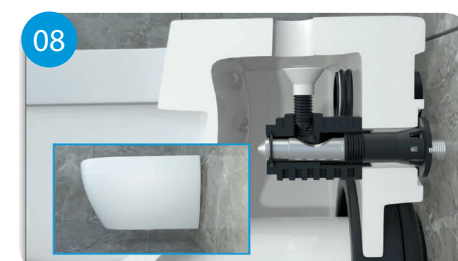



Installation Top-Fixation **with** sound insulation*

Item A10279


PRESSALIT®

Assembly instructions for flow reducer



The flush flow reducer should only be used if the flush pressure is too high and over-splashing occurs during flushing. The throttle is simply inserted into the inlet pipe to the WC. Depending on the position, this results in a reduction of 30-40%.

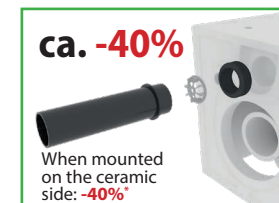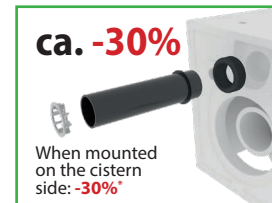


* Figures are approx. values

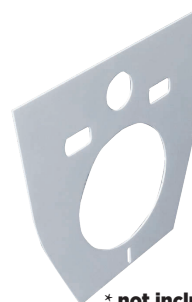

* not included

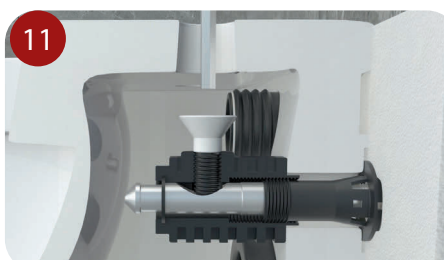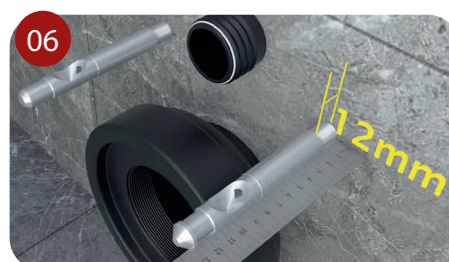

DK3/DG5

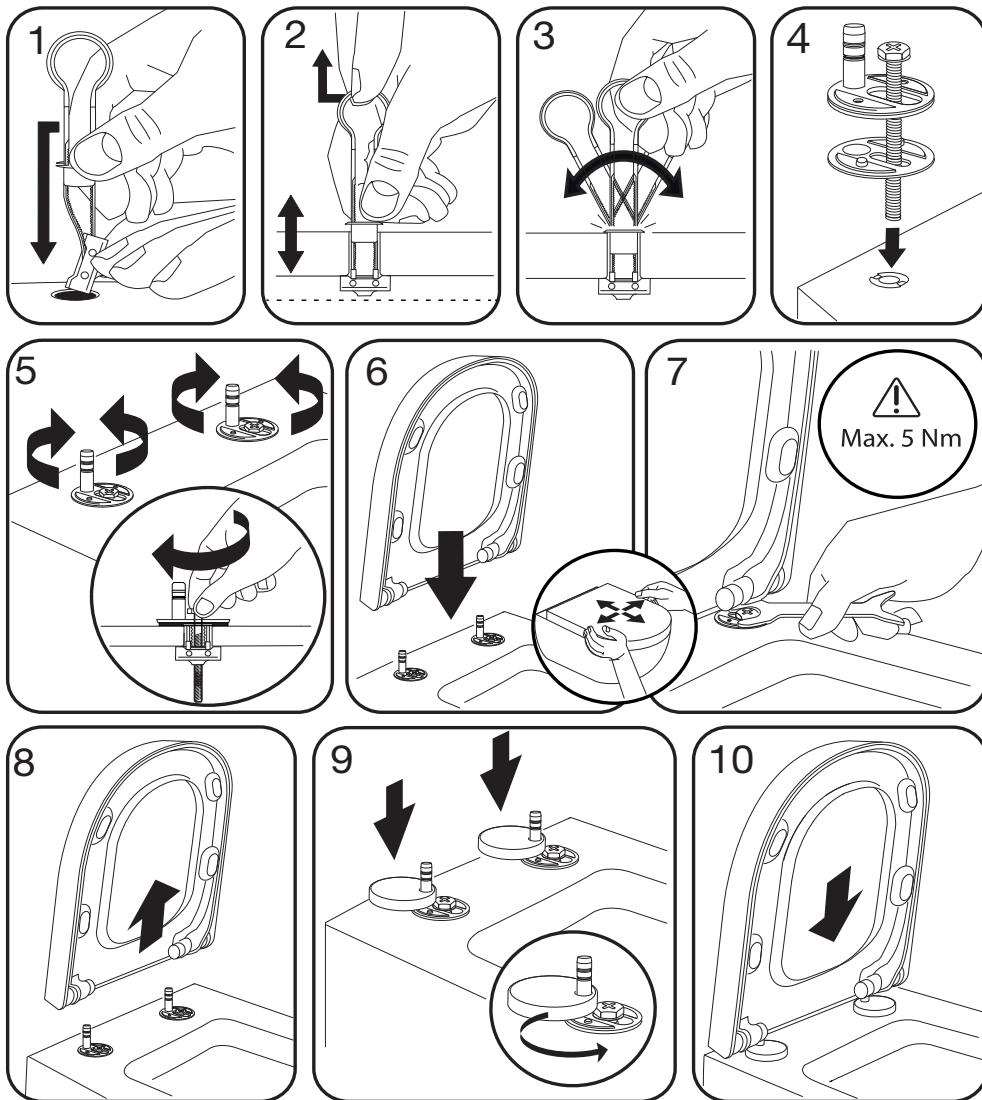

31-05-2024

