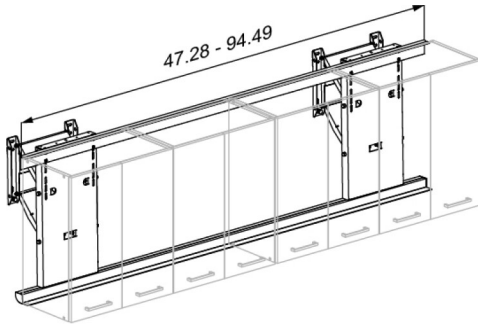




PRESSALIT®

Product Item number	INDIVO lift for wall cabinets 47.3"-94.5" RK1821
Product description	<p>EAN:5708590379074</p>  <p>Pressalit INDIVO lifting units can be easily integrated into the private home, ensuring that the whole family can enjoy the full potential and use the height adjustable function. The lifting units can also help provide a flexible kitchen solution for e.g. care centers, school kitchens and school science labs, wherever there is a need for frequent height adjustments on kitchen countertops and wall cabinets.</p> <p>INDIVO lift for wall cabinets, with two motors and control box. Max. load: 485 lbs including the cabinets. Height adjustable 16.9" with switches or wired remote control. When height adjusting downward, the lift will also move 7.1" towards the user. For wall cabinets width 47.3"-94.5". Please note: Maximum height of cabinets are 28.5". If a wall cabinet is to be higher than this, an extension RK1065 or RK1066 must be added. Please indicate height, width and depth of wall cabinets when ordering. Excl. mounting kit.</p>
Adjustability Adjustment height Product capacity Speed up Noise level	Height adjustable 16,94 inch Max. load (including cabinets): 2 lifts: 485 lbs. Speed up: 0,71 inch/s Speed down: 0,71 inch/s 45 dB
Materials	Material: Lift motor: Steel Cross braces: Aluminium Switches: ABS plastic



Product	INDIVO lift for wall cabinets 47.3"-94.5"
Item number	RK1821
Ergonomy	Wall cabinets are moved diagonally, that is both vertically and towards the user. This makes it easy for seated users and children to see and access covered contents. Height-adjustable wall cabinets provide extra storage options in kitchens where cabinets cannot be installed under countertops out of consideration for seated users.
Features	Lift heights for wall cabinets are adjusted via switches in the front countertop edge. Operating switches can be placed wherever you want along the front edge. The switches are color-coded - aluminium to operate countertops, and red to operate wall cabinets. The design of the lifts ensures that the lift motors are as discreet as possible, regardless of the cabinet position. When the wall cabinets are lowered 41.2" to their lowest position, they are also extended 7" towards the user.
Actuator (motor)	DB4 Deskline (Linak) 1000 N, IP22
Control box	CBD6 (Linak)
Wired remote control	HB53 (Linak), IPX1
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.



PRESSALIT®

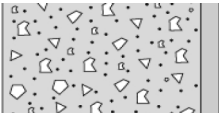
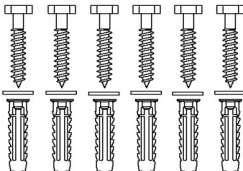

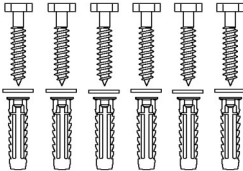
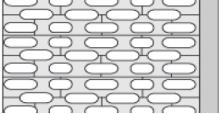
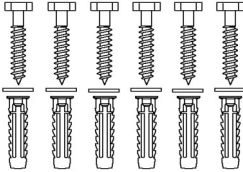
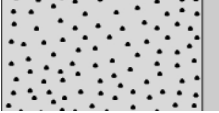
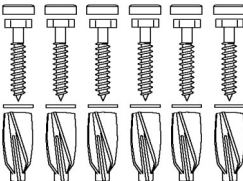
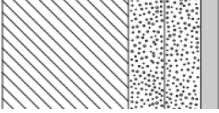
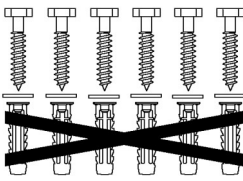
Product	INDIVO lift for wall cabinets 47.3"-94.5"
Item number	RK1821
Cleaning	<p>This product should be cleaned with hot water or a mild cleaning solution. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that water deposits (Calcium, lime etc.) be removed from wall tracks and other aluminum parts using a solution of three parts of 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts should be wiped over with a damp cloth wrung out in plain water.</p>



PRESSALIT®

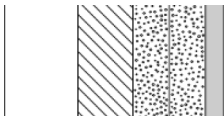
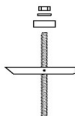


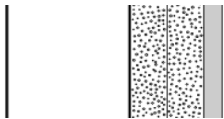
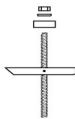


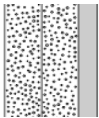
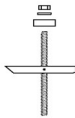


Product	INDIVO lift for wall cabinets 47.3"-94.5"
Item number	RK1821

Mounting in different wall types

	<p>Concrete >B25</p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. To be ordered separately.</p>	
	<p>Solid Brick >= Mz12</p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. To be ordered separately.</p>	
	<p>Solid Sand Lime Brick >= Hlz12</p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. To be ordered separately.</p>	
	<p>Aerated Concrete P4</p> <p>V8658 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs GB14. To be ordered separately.</p>	
	<p>Drywall (2 x 12,5 mm) water-resistant, re-enforced with wood</p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. NB! Plugs are not needed. To be ordered separately.</p>	



PRESSALIT®

Product Item number	INDIVO lift for wall cabinets 47.3"-94.5" RK1821		
	Drywall (2 x 12,5 mm) water-resistant, re-enforced with 22 mm plywood Wall fasteners (6 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.	  	
	Drywall (2 x 12,5 mm) water-resistant, re-enforced with steel plates (.08 inch) Wall fasteners (6 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.	  	
	Drywall (2 x 12,5 mm) water-resistant Wall fasteners (6 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.	  	

It is the responsibility of the installer to ensure that suitable wall fasteners are used.

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®