




Product Item number	Lift for worktop, manually height adjustable RK1181
Product description	EAN: 5708590293806 HMI: 61269  Pressalit INDIVO lifting units can be easily integrated into the private home, ensuring that the whole family can enjoy the full potential and use the height adjustable function. The lifting units can also help provide a flexible kitchen solution for e.g. care centers, school kitchens and school science labs, wherever there is a need for frequent height adjustments on kitchen worktops and cupboards. Manual lift for freestanding worktop. For worktops from 1400 - 2000 mm. Height adjustable 300 mm. Including 2 telescopic legs, longitudinal and cross braces and crank handle. Pressalit recommends overhang of 200 mm at either end of worktop to allow for ease of approach in wheel-chair. Please state desired length when ordering.
Adjustability Product capacity	Height adjustable Maximum load (evenly distributed): 100 kg including worktop.
Materials Ergonomy	Material: Telescopic leg: Aluminium, ABS plastic Cross braces: Aluminium Brackets: Steel Crank handle: Steel Surface treatment: Brackets: Powder lacquered (grey RAL 9006) A manual, freestanding Indivo solution is the budget choice when you need a work or dining table which can be adapted to the given user or situation. A freestanding worktop can also be used in rooms in which the walls are not strong enough to support the wall-mounted models.



Product Item number	Lift for worktop, manually height adjustable RK1181
Features	Lift heights are adjusted in height using a crank handle. Manual lifts may be used with worktops with or without an edge. The crank handle socket can be positioned anywhere along the long sides of the worktop. The design of the legs and feet make the table stable and secure, and ensure the lift causes minimal inconvenience to wheelchair users. The design of the lift makes it possible to use the worktop from all sides. Height adjustable over a range of 300 mm. Available for worktops of any length between 1400 mm and 3000 mm.
Warranty Cleaning	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged. The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container. DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningsprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70% NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate. DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.

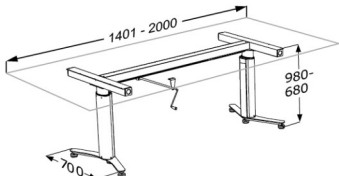

PRESSALIT®

Product	Lift for worktop, manually height adjustable
Item number	RK1181

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®

8. juli 2026