




PRESSALIT®

Product	Pressalit folding seat 412
Item number	412000
Colour	VVS:777510000 NRF:6190881 RSK:7904523 EAN:5708590212944 White 
Product description	Pressalit folding seat - soft, round forms and soft close. An extra seat in the bathroom, in the stairway or maybe in the hall? The folding seat is not suitable for use in the shower or any other facilities where the folding seat is exposed to water. Pressalit wall-mounted folding seat no. 412 with damping, made from color ingrained duroplast including stainless steel hinge for versatile applications in private homes and institutions. An extra seat when in use, and discrete, yet elegant when folded (with damper) against the wall. The folding seat is not suitable for use in the shower or any other facilities where the folding seat is exposed to water. - load 125 kg/275 lbs - 10 year guarantee
Product capacity	Load - ring seat 125 kg
Materials	FOLDING SEAT: The material is colour ingrained duroplast (UF A 10 = urea formaldehyde) that contains no environmentally hazardous substances. UF plastic comprises 67% urea formaldehyde resin, 28% cellulose, as well as 5% minerals, pigments, lubricants and moisture content. The raw material from the supplier contains up to 0.03% free formaldehyde and even less following curing. Wall mount stainless steel (V2A) Type W no. 1.4308 Support stainless steel (V2A) Type W no. 1.4308 Striker plate stainless steel (V2A) Type W no. 1.4301 Shaft stainless steel (V2A) Type W no. 1.4301 Handle PA66 30% GF. Polyamide (glass-fibre reinforced nylon) Damper make/model TOK model TD 58

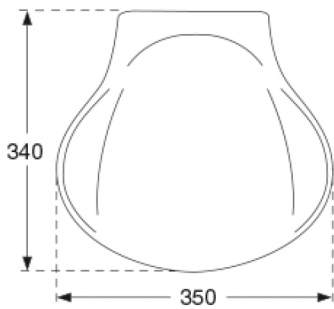

PRESSALIT®

Product	Pressalit folding seat 412
Item number	412000
Warranty	Your Pressalit toilet seat is subject to a 10-year product warranty against presentation of receipt. You should contact the dealer or store where you purchased the seat in the event of a complaint. In the event of complaints about defective materials and/or manufacturing defects and/or functional limitations ascertained within a 10-year period, following proper use and cleaning of the toilet seat (we reserve the right to examine the toilet seat at our factory), Pressalit will deliver spare parts or replace the toilet seat by an identical or similar model. If the color is no longer available, Pressalit reserves its right to replace the toilet seat by a similar model in the color white. Upon replacement or delivery of a spare part, the warranty period will not be extended nor renewed. If replacement is not possible, Pressalit may instead refund the purchase price.
Cleaning	Use a mild soap solution to clean the seat. Please take care that the seat and hinges are not left damp. Dry off any residual water or cleaning agent with a soft cloth. Avoid contact of the seat and hinges with abrasive, corrosive or chlorine-based cleaners, as these may cause damage or lead to flash rust. Therefore, when cleaning the bowl, make sure that the seat and cover are kept in an upright position until all cleaning agent has been flushed away. Subject to changes in the product range, technical changes and printing errors.

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®