




PRESSALIT®

Product	MATRIX MEDIUM wash basin with overflow
Item number	R2120000
Colour	White
Product description	<p>VVS:639861100 NRF:6132437 RSK:7503948 EAN:5708590349381 HMI: 105900</p>  <p>MATRIX is a series of wash basins, most of them are designed by Pressalit. MATRIX SMALL and CURVE wash basins fit onto PLUS, SELECT and VALUE wash basin brackets, whereas MATRIX MEDIUM, ANGLE, ANGLE DEEP and SQUARE are tailor made to fit specific brackets.</p> <p>MATRIX MEDIUM vanity wash basin, 780 x 550 x 165 mm, with two integrated handrails in the front, with tap hole Ø36 mm and overflow. Drain fitting must be bought separately. The wash basin has raised edges, preventing water from running over the back or down the outer sides. Materials: Cultured marble with a high-polished, pore-free sanitary gel coating. Can be used with MATRIX wash basin bracket R4820 (UK: R4825) or MATRIX supports R2015 or R2010.</p>
Product capacity	180 kg.
Materials	Cultured marble with a high-polished, pore-free sanitary gel coating.
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.

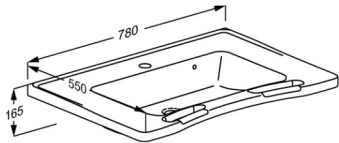

Product	MATRIX MEDIUM wash basin with overflow
Item number	R2120000
Cleaning	<p>For cleaning the wash basin, use hot water and a mild soapy cleaning agent. Make sure that the product is wiped down with a soft rag wrung out in clear water immediately after cleaning.</p> <p>For disinfecting the wash basin, the following agents can be used:</p> <ul style="list-style-type: none">Sodium hydroxide 5%Acetic acid solution 10%Ethanol solution 70%Sodium hypochlorite 5%, active chlorineSodium chloride 170g/l, diluted to 50%. <p>Make sure that the product is wiped down with a soft rag wrung out in clear water immediately after disinfection.</p> <p>NB! Do not use abrasive cleaning agents, as this will cause damage to the surface of the wash basin.</p>