




Product Item number	PLUS wash basin bracket with lever control, manually height and sideways adjustable R4580112
Colour	VVS: 654001510 NRF: 6132529 RSK: 7972588 EAN: 5708590309415 HMI: 71758 NBS: N13:30,335 FDA: ILW/D142473 Anthracite grey
Product description	 PLUS wash basin brackets are available in electrically, pneumatically and manually height adjustable versions. They are suitable for wall-mounting or for fitting to Pressalit PLUS wall tracks. PLUS wash basin bracket. Manually height adjustable by 240 mm with lever control. Height and sideways adjustable. Recommendation: Flexible feed and waste system R2064/R2065. (UK markets R2074/R2075). Anthracite cover plate for vertical wall track. Materials: Aluminium and ABS polymer. Incl. fixing bolts for wash basin. For fitting to horizontal PLUS wall track (not included).
Adjustability Adjustment height Product capacity	Height and sideways adjustable 240 mm Maximum load: 135 kg. Suitable for wash basins weighing no more than 22 kg. When the wash basin is loaded with 135 kg, each wall fastener will be carrying 30 kg. <i>Wash basin brackets need to be able to carry the weight of the wash basin, as well as support the weight of the person who is leaning against the wash basin or who is using the wash basin to rise from seated position.</i> Neither wash basin nor wash basin bracket are intended to carry the full body weight of a person, and the test methods applicable to wash basin brackets reflect this: ISO 17966 prescribes a static test on the front edge of the wash basin at 75% of maximum user weight, i.e. when the maximum load on a wash basin bracket is given as 135 kg and the wash basin weighs 22 kg, it is – according to ISO 17966 – the equivalent of a user weighing 151 kg leaning on the front edge of the wash basin.



Product	PLUS wash basin bracket with lever control, manually height and sideways adjustable
Item number	R4580112
Materials	The wash basin bracket is primarily made of 10-micrometre anodized aluminium. The ends of the bracket cover are capped with ABS polymer.
Ergonomy	The wash basin bracket suits all types of bolt-mounted wash basin. Its rounded, sleek design greatly facilitates cleaning.
Features	If the height of the wash basin only needs to be adjusted occasionally, a manually regulated wash basin bracket could be the best solution. Adjustment involves supporting the weight of the basin and part of the bracket. Where frequent height adjustment is expected, use gas-assisted wash basin bracket R4680 or electrically operated wash basin bracket R478x, instead.
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.
Cleaning	The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged. The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container. DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningsprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70% NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate. DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.

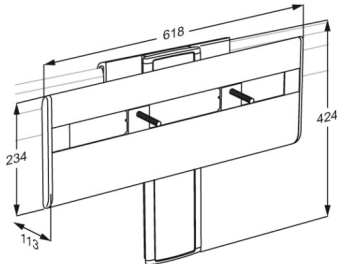

PRESSALIT®

Product	PLUS wash basin bracket with lever control, manually height and sideways adjustable
Item number	R4580112

pressalit.com
