




Product Item number	PLUS sink bracket with lever control, manually PLUS sink bracket, manually sideways adjustable R4580112
Color	VVS:654001510 NRF:6132529 RSK:7972588 EAN:5708590309415 HMI: 71758 NBS:N13:30,335 FDA:ILW/D142473 Anthracite gray
Product description	 PLUS sink brackets are available in electrically, pneumatically and manually height adjustable versions. They are suitable for wall-mounting or for fitting to Pressalit PLUS wall tracks. PLUS sink bracket. Manually height adjustable by 9.5" with lever control. vertical and horizontal adjustable. Recommendation: Flexible feed and waste system R2084/R2085/R2087. Anthracite cover plate for vertical wall track. Materials: Aluminium and ABS polymer. Incl. mounting bolts for sink. For mounting on horizontal wall track (not included).
Adjustability Adjustment height Product capacity	Vertical and horizontal adjustable 9,46 inch Maximum load: 298 lbs. Suitable for sinks weighing no more than 49 lbs. When the sink is loaded with 298 lbs, each wall fastener will be carrying 66 lbs. <i>Sink brackets need to be able to carry the weight of the sink, as well as support the weight of the person who is leaning against the sink or who is using the sink to rise from seated position.</i> Neither sink nor sink bracket are intended to carry the full body weight of a person, and the test methods applicable to sink brackets reflect this: ISO 17966 prescribes a static test on the front edge of the sink at 75% of maximum user weight, i.e. when the maximum load on a sink bracket is given as 298 lbs and the wash basin weighs 49 lbs, it is – according to ISO 17966 – the equivalent of a user weighing 332 lbs leaning on the front edge of the wash basin.
Materials	The sink bracket is primarily made of 3/8" anodized aluminium. The ends of the bracket cover are capped with ABS polymer.



Product Item number	PLUS sink bracket with lever control, manually PLUS sink bracket, manually sideways adjustable R4580112
Ergonomy Features	The sink bracket is compatible with all types of bolt-mounted sink. It's rounded, sleek design makes it easy to clean thoroughly. If the height of the sink only needs to be adjusted occasionally, a manually adjustable sink bracket could be the best solution. Adjustment involves supporting the weight of the sink and part of the bracket. If frequent height adjustment is anticipated, use pneumatic-assisted sink bracket R4680 or electrically operated sink bracket R478x, instead.
Warranty Cleaning	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date. This product should be cleaned with hot water or a mild cleaning solution. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged. The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container. DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningsprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70% NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate. DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that water deposits (Calcium, lime etc.) be removed from wall tracks and other aluminum parts using a solution of three parts of 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts should be wiped over with a damp cloth wrung out in plain water.

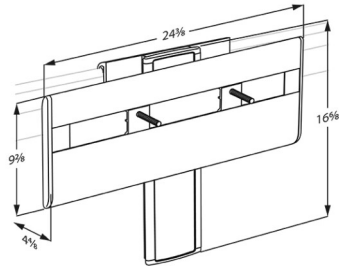

PRESSALIT®

Product	PLUS sink bracket with lever control, manually PLUS sink bracket, manually
Item number	sideways adjustable R4580112

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®

24. september 2026