




# PRESSALIT®

<b>Product</b>	MATRIX ANGLE wash basin without overflow, left-facing
<b>Item number</b>	R2043000
<b>Colour</b>	White
<b>Product description</b>	<p>VVS:636855000 NRF:6132511 EAN:5708590325132 HMI: 82617 NBS:N13:30,335</p>  <p>MATRIX is a series of wash basins, most of them are designed by Pressalit. MATRIX SMALL and CURVE wash basins fit onto PLUS, SELECT and VALUE wash basin brackets, whereas MATRIX MEDIUM, ANGLE, ANGLE DEEP and SQUARE are tailor made to fit specific brackets.</p> <p>MATRIX ANGLE vanity wash basin, 1000 x 571 x 120 mm, left-facing, with two integrated handrails in the front, with tap hole Ø36 mm, without overflow. Supplied with drain fitting. The wash basin has raised edges, preventing water from running over the back or down the outer sides.</p> <p>Materials: Cultured marble with a high-polished, pore-free sanitary gel coating. Suitable for R2010 fixed or R2015 height adjustable basin supports.</p>
<b>Product capacity</b>	200 kg.
<b>Materials</b>	Cultured marble with a high-polished, pore-free sanitary gel coating.
<b>Warranty</b>	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.

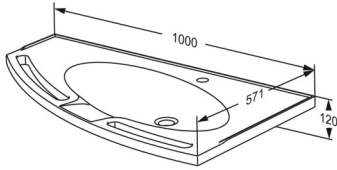

PRESSALIT®

<b>Product</b>	MATRIX ANGLE wash basin without overflow, left-facing
<b>Item number</b>	R2043000
<b>Cleaning</b>	<p>For cleaning the wash basin, use hot water and a mild soapy cleaning agent. Make sure that the product is wiped down with a soft rag wrung out in clear water immediately after cleaning.</p> <p>For disinfecting the wash basin, the following agents can be used:</p> <ul style="list-style-type: none"><li>Sodium hydroxide 5%</li><li>Acetic acid solution 10%</li><li>Ethanol solution 70%</li><li>Sodium hypochlorite 5%, active chlorine</li><li>Sodium chloride 170g/l, diluted to 50%.</li></ul> <p>Make sure that the product is wiped down with a soft rag wrung out in clear water immediately after disinfection.</p> <p><b>NB! Do not use abrasive cleaning agents, as this will cause damage to the surface of the wash basin.</b></p>

[pressalit.com](http://pressalit.com)

Pressalit A/S  
Pressalitvej 1  
DK-8680 Ry  
Tel.: +45 8788 8788  
Fax: +45 8788 8789  
E-mail: [pressalit@pressalit.com](mailto:pressalit@pressalit.com)

PRESSALIT®