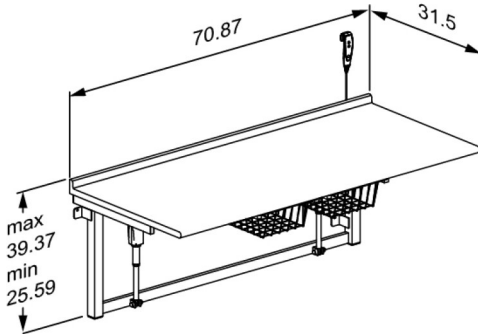




# PRESSALIT®

<b>Product</b> <b>Item number</b>	Changing table, 31.5" x 70.9", electrically height adjustable R8913000
<b>Color</b>	EAN:5708590367163  White
<b>Product description</b>	 <p>Pressalit offers a wide variety of changing tables designed for use in daycare facilities. The tables are available in several sizes and models, either free standing or wall-hung. The fold away feature in wall-hung tables is useful where space is limited. The wall-hang tables with low start are essential for daycare or preschool facilities. Even toddlers can climb onto the table themselves, without the staff lifting them.</p> <p>Changing table, wall-mounted, 31.5" x 70.9".          With motor and transformer, height adjustable from 25.6" - 39.4", with hand control.          Laminate worktop, incl. 2 wire baskets.          Materials: Laminate and powder-lacquered steel.          Excl. fixing kit.</p>
<b>Adjustability</b>	Height adjustable
<b>Adjustment height</b>	13,79 inch
<b>Product capacity</b>	Max load: 330 lbs.
<b>Speed up</b>	Speed up: 0,55 inch/s Speed down: 0,55 inch/s
<b>Noise level</b>	48 dB
<b>Materials</b>	Lifting unit and baskets: Powder-coated steel. Countertop: Melamine
<b>Ergonomy</b>	The smooth height adjustment ensures that it is always possible to set the table at an ergonomically correct height.
<b>Features</b>	Easy-to-clean surfaces ensure optimum hygiene.
<b>Mains connection (V)</b>	120



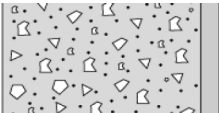
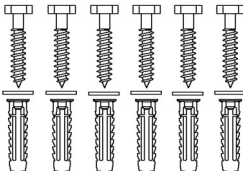

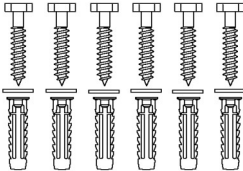
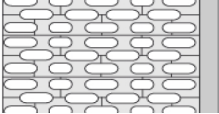
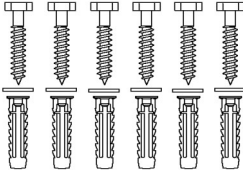
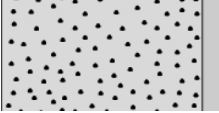
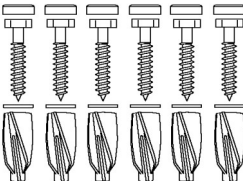
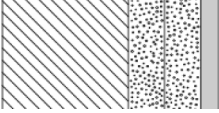
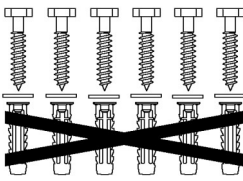
# PRESSALIT®

<b>Product</b>	Changing table, 31.5" x 70.9", electrically height adjustable
<b>Item number</b>	R8913000
<b>Actuator (motor)</b>	2 x LA31 Deskline (Linak), 1500N, IPX1
<b>Control box</b>	CBD6 (Linak), IP20
<b>Wired remote control</b>	HB30 (Linak), IPX4
<b>Power consumption (maximum load)</b>	Power consumption by maximum load: 96 W Power consumption by standby: 0,1 W
<b>Warranty</b>	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.
<b>Cleaning</b>	<p>This product should be cleaned with hot water or a mild cleaning solution. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p><b>DISINFECTANTS:</b> Clinimax Difficil-S Erisan OXY+ Sprit (husholdningsprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p><b>NON-DISINFECTANTS:</b> Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p>



<b>Product</b>	Changing table, 31.5" x 70.9", electrically height adjustable
<b>Item number</b>	R8913000

## Mounting in different wall types

	<p><b>Concrete &gt;B25</b></p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. To be ordered separately.</p>	
	<p><b>Solid Brick &gt;= Mz12</b></p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. To be ordered separately.</p>	
	<p><b>Solid Sand Lime Brick &gt;= Hlz12</b></p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. To be ordered separately.</p>	
	<p><b>Aerated Concrete P4</b></p> <p>V8658 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs GB14. To be ordered separately.</p>	
	<p><b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with wood</b></p> <p>V8608 - Mounting kit, 6 lag bolts Ø10 x 70 - plugs SX12. NB! Plugs are not needed. To be ordered separately.</p>	



# PRESSALIT®

<b>Product</b> <b>Item number</b>	Changing table, 31.5" x 70.9", electrically height adjustable R8913000
	<p><b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with 22 mm plywood</b></p> <p>Wall fasteners (6 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.</p>
	<p><b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with steel plates (.08 inch)</b></p> <p>Wall fasteners (6 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.</p>
	<p><b>Drywall (2 x 12,5 mm) water-resistant</b></p> <p>Mounting in this wall type is not recommended - risk of fatal injury to persons and walls.</p>

pressalit.com

Pressalit A/S  
 Pressalitvej 1  
 DK-8680 Ry  
 Tel.: +45 8788 8788  
 Fax: +45 8788 8789  
 E-mail: [pressalit@pressalit.com](mailto:pressalit@pressalit.com)

# PRESSALIT®