




|  |   |
|--|---|
| <p><b>Product</b><br/><b>Item number</b></p>   | <p>INDIVO Pack Small, lift for countertop 23.6"-60"<br/>RK1860202</p>   |
| <p><b>Color</b><br/><br/><b>Product description</b></p>  | <p>EAN:5708590395876</p>  <p>Gray (RAL 9006)</p> <p>Pressalit INDIVO lifting units can be easily integrated into the private home, ensuring that the whole family can enjoy the full potential and use the height adjustable function. The lifting units can also help provide a flexible kitchen solution for e.g. care centers, school kitchens and school science labs, wherever there is a need for frequent height adjustments on kitchen countertops and wall cabinets.</p> <p>INDIVO Pack small, lift for countertop, with two motors and control box.<br/>Incl. cross brace and three brackets.<br/>Height adjustable up to 11.8" with switch.<br/>For countertop length 23.6"-60".</p> <p>Indivo Pack small - 220 lbs, the package contains:<br/>2 x INDIVO lifting columns<br/>1 x Cross brace<br/>1 x Safety strip, self-adhesive<br/>1 x Cable tray<br/>1 x Electrical components kit<br/>3 x Stability bars for countertop<br/>12 x Brackets for fitting of fascia<br/>Excl. mounting kit</p> |
| <p><b>Adjustability</b><br/><b>Adjustment height</b><br/><br/><b>Product capacity</b><br/><br/><b>Speed up</b><br/><br/><b>Noise level</b></p> | <p>Height adjustable</p> <p>11,82 inch</p> <p>Maximum load: 220 lbs, this includes the weight of the countertop.<br/>The load must be evenly distributed.</p> <p>Speed up: 0,79 inch/s<br/>Speed down: 0,79 inch/s</p> <p>48 dB</p>   |

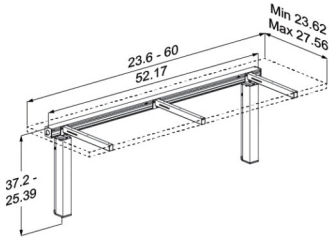

|   |  |
|---|--|
| <b>Product</b>                          | INDIVO Pack Small, lift for countertop 23.6"-60"   |
| <b>Item number</b>                      | RK1860202  |
| <b>Materials</b>                        | Lifting columns: Powder-coated steel<br>Cross brace: Aluminium<br>Brackets: Powder-coated steel  |
| <b>Ergonomy</b>                         | An electric height-adjustable kitchen countertop is ideal in all situations where various users - both seated and standing - use the same kitchen.<br>This is equally true in private homes as well as larger centers with common kitchen facilities such as group homes and care centers. |
| <b>Features</b>                         | The lifts are height adjusted via a switch in the front edge.  |
| <b>Mains connection (V)</b>             | 120  |
| <b>Actuator (motor)</b>                 | DL17 Deskline (Linak) 70N, IP20  |
| <b>Control box</b>                      | CBD6S (Linak) IP20   |
| <b>Wired remote control</b>             | HB53 (Linak), IPX1   |
| <b>Power consumption (maximum load)</b> | Power consumption by maximum load: 450 W<br>Power consumption by standby: 2 W  |
| <b>Warranty</b>                         | Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.   |




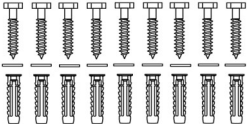
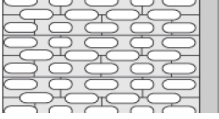
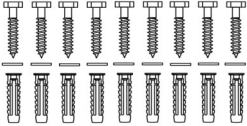
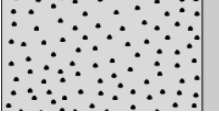
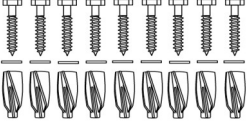
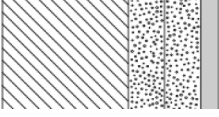
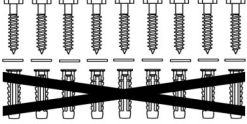


|                    |   |
|--------------------|---|
| <b>Product</b>     | INDIVO Pack Small, lift for countertop 23.6"-60"  |
| <b>Item number</b> | RK1860202   |
| <b>Cleaning</b>    | <p>This product should be cleaned with hot water or a mild cleaning solution. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p><b>DISINFECTANTS:</b><br/>Clinimax Difficil-S<br/>Erisan OXY+<br/>Sprit (husholdningsprit)<br/>Suma Bac D10<br/>Virkon<br/>Rodalon Desinfektionsspray<br/>Lysoformin Spezial<br/>CaviCide<br/>Sufanios Premium<br/>Tvättsprit 70%</p> <p><b>NON-DISINFECTANTS:</b><br/>Suma Star free D1<br/>Taski 100<br/>Taski 200<br/>Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p><b>DECALCIFICATION OF ALUMINUM PARTS:</b><br/>Pressalit recommends that water deposits (Calcium, lime etc.) be removed from wall tracks and other aluminum parts using a solution of three parts of 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts should be wiped over with a damp cloth wrung out in plain water.</p> |
| <b>WEEE</b>        | <p>Please enquire of your local Pressalit subsidiary or distributor (in countries where there is no subsidiary) that will arrange for recycling of electronic waste in accordance with the WEEE directive.</p>  |









|                    |  |
|--------------------|--|
| <b>Product</b>     | INDIVO Pack Small, lift for countertop 23.6"-60" |
| <b>Item number</b> | RK1860202  |

## Mounting in different wall types
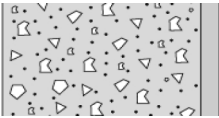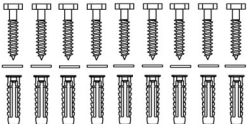
|   |  |   |
|---|--|---|
|    | <b>Concrete &gt;B25</b><br>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12.<br>To be ordered separately.   |    |
|   | <b>Solid Brick &gt;= Mz12</b><br>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12.<br>To be ordered separately.   |   |
|  | <b>Solid Sand Lime Brick &gt;= Hlz12</b><br>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12.<br>To be ordered separately.  |  |
|  | <b>Aerated Concrete P4</b><br>V8657 - Mounting kit, 9 lag bolts M0.4" x 2.8" (Ø10 x 70 mm), plugs GB14.<br>To be ordered separately.   |  |
|  | <b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with wood</b><br>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. NB! Plugs are not needed.<br>To be ordered separately. |  |

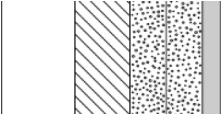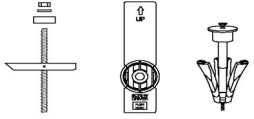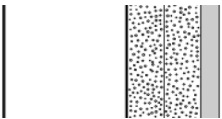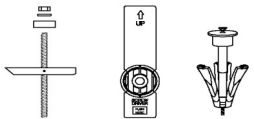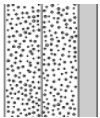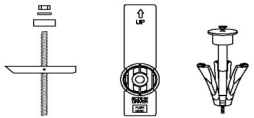

|   |  |   |
|---|--|---|
| <b>Product</b><br><b>Item number</b>  | INDIVO Pack Small, lift for countertop 23.6"-60"<br>RK1860202  |   |
|    | <b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with 22 mm plywood</b><br>Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.           |    |
|    | <b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with steel plates (.08 inch)</b><br>Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar. |    |
|  | <b>Drywall (2 x 12,5 mm) water-resistant</b><br>Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.   |  |

It is the responsibility of the installer to ensure that suitable wall fasteners are used.