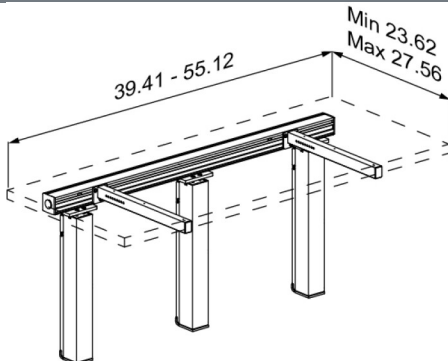




PRESSALIT®

Product	INDIVO lift for countertop 39.5" -55.1"
Item number	RK1851202
	EAN:5708590379098
Color	Gray (RAL 9006)
Product description	 <p>Pressalit INDIVO lifting units can be easily integrated into the private home, ensuring that the whole family can enjoy the full potential and use the height adjustable function. The lifting units can also help provide a flexible kitchen solution for e.g. care centers, school kitchens and school science labs, wherever there is a need for frequent height adjustments on kitchen countertops and wall cabinets.</p> <p>INDIVO lift for countertop, with three motors and control box. Max. load: 330 lbs including the countertop. Incl. cross brace and two brackets. Height adjustable up to 11.8" with switch or wired remote control. For countertop length 39.5" - 55.1". Please indicate length and depth of countertop when ordering. Excl. mounting kit.</p>
Adjustability	Height adjustable
Adjustment height	11,82 inch
Product capacity	Maximum load: 330 lbs, this includes the weight of the countertop. The load must be evenly distributed.
Speed up	Speed up: 0,79 inch/s Speed down: 0,79 inch/s
Noise level	45 dB
Materials	Lifting columns: Powder-coated steel Cross brace: Aluminium Brackets: Powder-coated steel



PRESSALIT®

Product	INDIVO lift for countertop 39.5" -55.1"
Item number	RK1851202
Ergonomy	<p>An electric height-adjustable kitchen countertop is ideal in all situations where various users - both seated and standing - use the same kitchen.</p> <p>This is equally true in private homes as well as larger centers with common kitchen facilities such as group homes and care centers.</p>
Features	Lifts are height adjusted either via switches in the front edge or with a wired remote control.
Actuator (motor)	DL17 Deskline (Linak) 70N, IP20
Control box	CBD6S (Linak) IP20
Wired remote control	HB53 (Linak), IPX1
Power consumption (maximum load)	<p>Power consumption by maximum load: 300 W</p> <p>Power consumption by standby: 2 W</p>
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.



PRESSALIT®

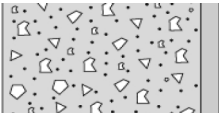
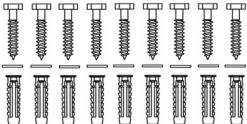

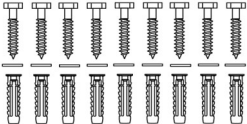

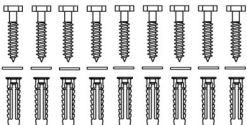

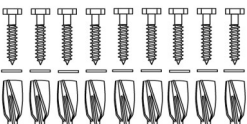

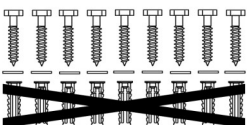
Product	INDIVO lift for countertop 39.5" -55.1"
Item number	RK1851202
Cleaning	<p>This product should be cleaned with hot water or a mild cleaning solution. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that water deposits (Calcium, lime etc.) be removed from wall tracks and other aluminum parts using a solution of three parts of 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts should be wiped over with a damp cloth wrung out in plain water.</p>



PRESSALIT®

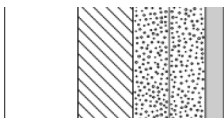
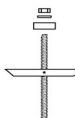

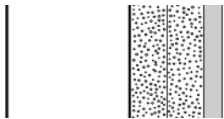


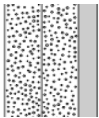


Product	INDIVO lift for countertop 39.5" -55.1"
Item number	RK1851202

Mounting in different wall types

	<p>Concrete >B25</p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. To be ordered separately.</p> 
	<p>Solid Brick >= Mz12</p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. To be ordered separately.</p> 
	<p>Solid Sand Lime Brick >= Hlz12</p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. To be ordered separately.</p> 
	<p>Aerated Concrete P4</p> <p>V8657 - Mounting kit, 9 lag bolts M0.4" x 2.8" (Ø10 x 70 mm), plugs GB14. To be ordered separately.</p> 
	<p>Drywall (2 x 12,5 mm) water-resistant, re-enforced with wood</p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. NB! Plugs are not needed. To be ordered separately.</p> 



PRESSALIT®

Product Item number	INDIVO lift for countertop 39.5" -55.1" RK1851202		
	Drywall (2 x 12,5 mm) water-resistant, re-enforced with 22 mm plywood Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.		
	Drywall (2 x 12,5 mm) water-resistant, re-enforced with steel plates (.08 inch) Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.		
	Drywall (2 x 12,5 mm) water-resistant Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.		

It is the responsibility of the installer to ensure that suitable wall fasteners are used.

pressalit.com

Pressalit A/S
 Pressalitvej 1
 DK-8680 Ry
 Tel.: +45 8788 8788
 Fax: +45 8788 8789
 E-mail: pressalit@pressalit.com

PRESSALIT®