




<p>Product Item number</p>	<p>Touchfree faucet with temperature control RT632</p>
<p>Product description</p>	<p>EAN:5708590377094</p>  <p>Touchfree bathroom faucet with temperature control lever that can be set to dispense water at the desired temperature. The touch-free faucet is activated by an infrared sensor that responds to hand motion, turning on and off automatically, and provides a solution for safer and more hygienic hand-washing. Equipped with a made-to-last surface and for saving water, and still guarantee optimal water flow. Easy installation and a battery life of 7 years (150 uses per day).</p> <p>Touchfree faucet with temperature control, infrared sensor, adjustable control lever and long battery life. ADA compliant. Complies with ASME A112.18.1/CSA B125.1 We recommend T4679 plumbing kit with 0.4" compatible adaptor.</p>
<p>Features</p>	<ul style="list-style-type: none"> Infrared electronic activation Thermal disinfection 7 preset programs Auto-flush and Cleaning mode ON/OFF Battery powered (includes CR-P2 lithium battery) Battery life: 7 years (150 uses per day) Multi-stage battery life status display Stainless steel braided flexible supply with 3/8" compression fitting Includes strainer and check valve on the inlet 0.5gpm (1.9Lpm) multi-laminar spray 0.1 Gallon per washing cycle (CALGreen compliant) Maximum running time: 12 seconds per cycle
<p>Warranty</p>	<p>Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.</p>

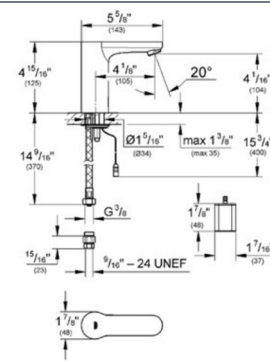

PRESSALIT®

Product	Touchfree faucet with temperature control
Item number	RT632
Cleaning	<p>Recommended cleaning of the chrome surfaces of the fitting. The fitting must be cleaned with neutral or mild alkaline (pH 6-9) liquid cleaning agents, and the detergent manufacturer's instructions for use and dosing must always be followed.</p> <p>Wet a sponge or a soft cloth with detergent solution and clean all surfaces of the faucet. Then rinse the faucet with plenty of clean, mildly warm water, and finally dry the faucet.</p> <p>IMPORTANT! Do not use a spray bottle to apply detergent directly to the faucet. Organic solvents, corrosives or abrasives must not be used.</p>
WEEE	<p>Please enquire of your local Pressalit subsidiary or distributor (in countries where there is no subsidiary) that will arrange for recycling of electronic waste in accordance with the WEEE directive.</p>

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®