




# PRESSALIT®

|   |  |
|---|--|
| <b>Product</b><br><b>Item number</b>            | Lift for worktop, manually height adjustable<br>RK1110   |
| <b>Product description</b>                      | <p> EAN: 5708590292755<br/> HMI: 54799 </p>  <p> The name INDIVO relates to the individual configuration of the products.<br/><br/> Manual lift for worktop<br/> Lift for worktop, with a crank handle<br/> Including 2 brackets<br/> Lengths from 600-1000mm.<br/> Height adjustable 300mm.<br/> Incl. mounting kit for brick wall<br/> Please state desired length when ordering </p>       |
| <b>Adjustability</b><br><b>Product capacity</b> | Height adjustable<br><br>Maximum load (evenly distributed):<br>100 kg including worktop.   |
| <b>Materials</b><br><br><b>Ergonomy</b>         | <p> Material:<br/> Telescopic leg: Aluminium, ABS plastic<br/> Cross braces: Aluminium<br/> Brackets: Steel<br/> Crank handle: Steel<br/> Surface treatment:<br/> Brackets: Powder lacquered (grey RAL 9006) </p> <p> Kitchen worktops which can be adjusted in height using a crank handle are the budget solution for kitchens catering to both seated and standing users.<br/> These are most commonly used in kitchens which do not require frequent, daily adjustment. </p> |

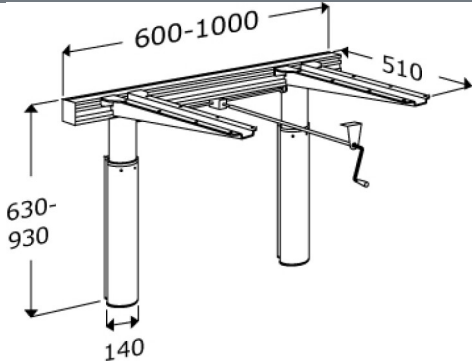

# PRESSALIT®

|  |   |
|--|---|
| <b>Product</b><br><b>Item number</b>   | Lift for worktop, manually height adjustable<br>RK1110  |
| <b>Features</b>                        | <p>Manual lifts are adjusted in height using a crank handle.<br/>They can be used with worktops, with or without an edge.<br/>The crank handle socket can be positioned anywhere along the front edge, except under a sink or hob.<br/>Lifts can be adapted to most standard kitchen components.<br/>Lifts are available for worktops of any length between 600 mm and 3000 mm.<br/>Height adjustable 300 mm.</p>   |
| <b>Warranty</b><br><br><b>Cleaning</b> | <p>Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.</p> <p>INDIVO lift for kitchen worktop.<br/>The product is to be cleaned with hot water or a mild soapy cleaning agent.<br/>Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS:<br/>Clinimax Difficil-S<br/>Erisan OXY+</p> <p>NON-DISINFECTANTS:<br/>Suma Star free D1<br/>Taski 100<br/>Taski 200</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS:<br/>Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p> |



# PRESSALIT®

|                    |  |
|--------------------|--|
| <b>Product</b>     | Lift for worktop, manually height adjustable |
| <b>Item number</b> | RK1110                                       |

---

[pressalit.com](http://pressalit.com)

---

Pressalit A/S  
Pressalitvej 1  
DK-8680 Ry  
Tel.: +45 8788 8788  
Fax: +45 8788 8789  
E-mail: [pressalit@pressalit.com](mailto:pressalit@pressalit.com)

## PRESSALIT®