




# PRESSALIT®

<b>Product</b> <b>Item number</b>	Lift for worktop, manually height adjustable RK1111
<b>Product description</b>	<div> <div> EAN:5708590292762  HMI: 54800 </div>  </div> <p>The name INDIVO relates to the individual configuration of the products.</p> <p>Manual lift for worktop  Lift for worktop, with a crank handle  Including 2 brackets  Lengths from 1001-1400 mm.  Height adjustable 300mm.  Incl. mounting kit for brick wall  Please state desired length when ordering</p>
<b>Adjustability</b> <b>Product capacity</b>	Height adjustable Maximum load (evenly distributed): 100 kg including worktop.
<b>Materials</b>  <b>Ergonomy</b>	<p>Material:  Telescopic leg: Aluminium, ABS plastic  Cross braces: Aluminium  Brackets: Steel  Crank handle: Steel  Surface treatment:  Brackets: Powder lacquered (grey RAL 9006)</p> <p>Kitchen worktops which can be adjusted in height using a crank handle are the budget solution for kitchens catering to both seated and standing users.  These are most commonly used in kitchens which do not require frequent, daily adjustment.</p>

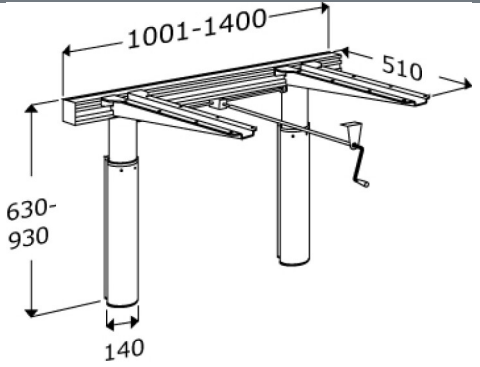

# PRESSALIT®

<b>Product</b> <b>Item number</b>	Lift for worktop, manually height adjustable RK1111
<b>Features</b>	<p>Manual lifts are adjusted in height using a crank handle. They can be used with worktops, with or without an edge. The crank handle socket can be positioned anywhere along the front edge, except under a sink or hob. Lifts can be adapted to most standard kitchen components. Lifts are available for worktops of any length between 600 mm and 3000 mm. Height adjustable 300 mm.</p>
<b>Warranty</b>  <b>Cleaning</b>	<p>Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.</p> <p>INDIVO lift for kitchen worktop. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p><b>DISINFECTANTS:</b> Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättssprit 70%</p> <p><b>NON-DISINFECTANTS:</b> Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p><b>DECALCIFICATION OF ALUMINUM PARTS:</b> Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>



# PRESSALIT®

<b>Product</b>	Lift for worktop, manually height adjustable
<b>Item number</b>	RK1111

---

[pressalit.com](http://pressalit.com)

---

Pressalit A/S  
Pressalitvej 1  
DK-8680 Ry  
Tel.: +45 8788 8788  
Fax: +45 8788 8789  
E-mail: [pressalit@pressalit.com](mailto:pressalit@pressalit.com)

# PRESSALIT®