




Product Item number	Lift for worktop, manually height adjustable RK1181
Product description	<p>EAN:5708590293806 HMI: 61269</p>  <p>The name INDIVO relates to the individual configuration of the products.</p> <p>Manual lift for freestanding worktop. For worktops from 1400 - 2000 mm. Height adjustable 300 mm. Including 2 telescopic legs, longitudinal and cross braces and crank handle. Pressalit recommends overhang of 200 mm at either end of worktop to allow for ease of approach in wheel-chair. Please state desired length when ordering.</p>
Adjustability	Height adjustable
Product capacity	Maximum load (evenly distributed): 100 kg including worktop.
Materials	<p>Material: Telescopic leg: Aluminium, ABS plastic Cross braces: Aluminium Brackets: Steel Crank handle: Steel Surface treatment: Brackets: Powder lacquered (grey RAL 9006)</p>
Ergonomy	<p>A manual, freestanding Indivo solution is the budget choice when you need a work or dining table which can be adapted to the given user or situation. A freestanding worktop can also be used in rooms in which the walls are not strong enough to support the wall-mounted models.</p>



Product	Lift for worktop, manually height adjustable
Item number	RK1181
Features	<p>Lift heights are adjusted in height using a crank handle.</p> <p>Manual lifts may be used with worktops with or without an edge.</p> <p>The crank handle socket can be positioned anywhere along the long sides of the worktop.</p> <p>The design of the legs and feet make the table stable and secure, and ensure the lift causes minimal inconvenience to wheelchair users.</p> <p>The design of the lift makes it possible to use the worktop from all sides.</p> <p>Height adjustable over a range of 300 mm.</p> <p>Available for worktops of any length between 1400 mm and 3000 mm.</p>
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.

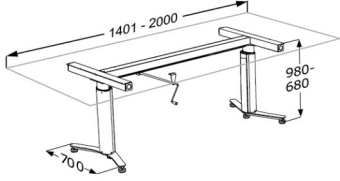

Product	Lift for worktop, manually height adjustable
Item number	RK1181
Cleaning	<p>INDIVO lift for kitchen worktop. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+ Sprit (husholdningsprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>



PRESSALIT®

Product	Lift for worktop, manually height adjustable
Item number	RK1181

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®