




# PRESSALIT®

<b>Product</b> <b>Item number</b>	Lift for worktop, manually height adjustable RK1182
<b>Product description</b>	<p> EAN:5708590293813  HMI: 61271 </p>  <p> The name INDIVO relates to the individual configuration of the products. </p> <p> Manual lift for freestanding worktop.  For worktops from 2001 - 2400 mm.  Height adjustable 300 mm.  Including 2 telescopic legs, brackets, longitudinal and cross braces and crank handle.  Pressalit recommends overhang of 400 mm at either end of worktop to allow for ease of approach in wheel-chair.  Please state desired length when ordering. </p>
<b>Adjustability</b> <b>Product capacity</b>	Height adjustable Maximum load (evenly distributed): 100 kg including worktop.
<b>Materials</b>  <b>Ergonomy</b>	<p> Material:  Telescopic leg: Aluminium, ABS plastic  Cross braces: Aluminium  Brackets: Steel  Crank handle: Steel  Surface treatment:  Brackets: Powder lacquered (grey RAL 9006) </p> <p> A manual, freestanding Indivo solution is the budget choice when you need a work or dining table which can be adapted to the given user or situation.  A freestanding worktop can also be used in rooms in which the walls are not strong enough to support the wall-mounted models. </p>

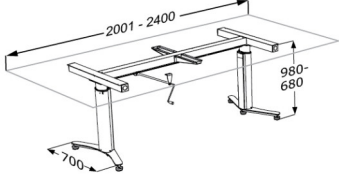

<b>Product</b> <b>Item number</b>	Lift for worktop, manually height adjustable RK1182
<b>Features</b>	<p>Lift heights are adjusted in height using a crank handle. Manual lifts may be used with worktops with or without an edge. The crank handle socket can be positioned anywhere along the long sides of the worktop. The design of the legs and feet make the table stable and secure, and ensure the lift causes minimal inconvenience to wheelchair users. The design of the lift makes it possible to use the worktop from all sides. Height adjustable over a range of 300 mm. Available for worktops of any length between 1400 mm and 3000 mm.</p>
<b>Warranty</b>  <b>Cleaning</b>	<p>Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.</p> <p>INDIVO lift for kitchen worktop. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>



# PRESSALIT®

<b>Product</b>	Lift for worktop, manually height adjustable
<b>Item number</b>	RK1182

---

[pressalit.com](http://pressalit.com)

---

Pressalit A/S  
Pressalitvej 1  
DK-8680 Ry  
Tel.: +45 8788 8788  
Fax: +45 8788 8789  
E-mail: [pressalit@pressalit.com](mailto:pressalit@pressalit.com)

## PRESSALIT®