




Product Item number	PLUS wash basin bracket with cordless remote control, electrically height adjustable R4752
Product description	<p> VVS: 654003130 NRF: 6132536 RSK: 7972594 EAN: 5708590309323 HMI: 71759 NBS: N13:30,335 </p>  <p> PLUS wash basin brackets are available in electrically, pneumatically and manually height adjustable versions. They are suitable for wall-mounting or for fitting to Pressalit PLUS wall tracks. </p> <p> PLUS wash basin bracket, powered with cordless remote control, electrically height adjustable by 300 mm. Recommendation: Flexible feed and waste system R2067/R2065. (UK markets R2077/R2075). Materials: Aluminium and ABS polymer. Incl. fixing bolts for wash basin, incl. fixing material for brick wall. Will be discontinued no later than 12/31-2019. Subject to availability. </p>
Adjustability Adjustment height Product capacity	<p>Height adjustable</p> <p>300 mm</p> <p> Maximum load: 100 kg. Suitable for wash basins that weigh 16-22 kg. When the wash basin is loaded with 100 kg, each wall fastener will be carrying 42 kg. <i>Wash basin brackets need to be able to carry the weight of the wash basin, as well as support the weight of the person who is leaning against the wash basin or who is using the wash basin to rise from seated position.</i> Neither wash basin nor wash basin brackets are intended to carry a person, and the test methods applicable to wash basin brackets reflect this: ISO 17966 prescribes a static test on the front edge of the wash basin at 75% of maximum user weight, i.e. when the maximum load on a wash basin bracket is given as 100 kg and the wash basin weighs 20 kg, it is – according to ISO 17966 – the equivalent of a user weighing 106 kg leaning on the front edge of the wash basin. </p>
Speed upwards	<p> Speed up mm: 20 mm/s Speed down mm: 23 mm/s </p>



Product	PLUS wash basin bracket with cordless remote control, electrically height adjustable
Item number	R4752
Noise level	45 dB
Materials	The wash basin bracket is primarily made of 10-micrometre anodized aluminium. The ends of the bracket cover are capped with ABS polymer. The bracket is available with a cordless remote control made of ABS polymer.
Ergonomy	The height of the wash basin is easily adjusted by means of the cordless remote control. The wash basin bracket suits all types of bolt-mounted wash basin. Its rounded, sleek design greatly facilitates cleaning.
Features	An independant user will be able to make the necessary adjustments to an electrically operated wash basin bracket themselves without any problems.
Mains connection (V)	230
Actuator (motor)	LA27CS (Linak) 1500N, IPX6
Control box	TR6 (Linak) IPX0
Wired remote control	SEAV (Linak) IP54
Power consumption (maximum load)	Power consumption by maximum load, watt: 75 W Power consumption by standby: 1,5 W
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.

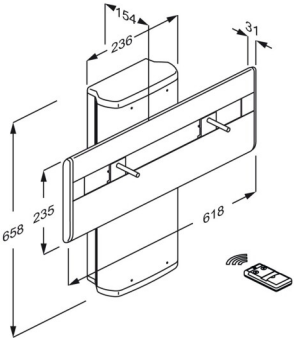

Product	PLUS wash basin bracket with cordless remote control, electrically height adjustable
Item number	R4752
Cleaning	<p>PLUS & SELECT wash basin brackets.</p> <p>The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS:</p> <p>Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p>NON-DISINFECTANTS:</p> <p>Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS:</p> <p>Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>



PRESSALIT®

Product	PLUS wash basin bracket with cordless remote control, electrically height adjustable
Item number	R4752

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®