




PRESSALIT®

Product	MATRIX LARGE wash basin with overflow
Item number	R2030000
Colour	<p>VVS:636858100</p> <p>NRF:6132505</p> <p>EAN:5708590325088</p> <p>HMI: 82612</p> <p>NBS:N13:30,335</p> <p>White</p>
Product description	<p>MATRIX is a series of wash basins, most of them are designed by Pressalit. MATRIX SMALL and CURVE wash basins fit onto PLUS, SELECT and VALUE wash basin brackets, whereas MATRIX MEDIUM, ANGLE, ANGLE DEEP and SQUARE are tailor made to fit specific brackets.</p> <p>MATRIX LARGE vanity wash basin, 900 x 490 x 130 mm, with two integrated handrails on the front edge and two handrails at the sides, with tap hole Ø36 mm and overflow.</p> <p>Supplied with drain fitting. The wash basin has raised edges, preventing water from running over the back or down the outer sides.</p> <p>Materials: Cultured marble with a high-polished, pore-free sanitary gel coating.</p> <p>Suitable for R2015 height adjustable basin supports.</p>
Product capacity	200 kg.
Materials	Cultured marble with a high-polished, pore-free sanitary gel coating.
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.



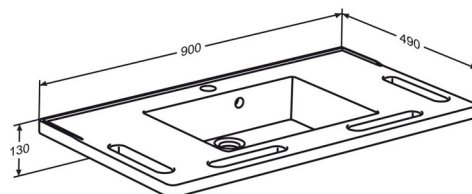

PRESSALIT®

Product	MATRIX LARGE wash basin with overflow
Item number	R2030000
Cleaning	<p>For cleaning the wash basin, use hot water and a mild soapy cleaning agent. Make sure that the product is wiped down with a soft rag wrung out in clear water immediately after cleaning.</p> <p>For disinfecting the wash basin, the following agents can be used:</p> <ul style="list-style-type: none">Sodium hydroxide 5%Acetic acid solution 10%Ethanol solution 70%Sodium hypochlorite 5%, active chlorineSodium chloride 170g/l, diluted to 50%. <p>Make sure that the product is wiped down with a soft rag wrung out in clear water immediately after disinfection.</p> <p>NB! Do not use abrasive cleaning agents, as this will cause damage to the surface of the wash basin.</p>

pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®