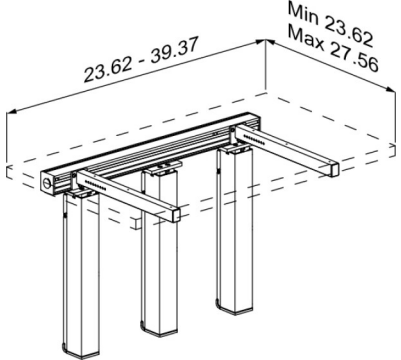




# PRESSALIT®

<b>Product</b> <b>Item number</b>	INDIVO lift for countertop 23.6" - 39.4" RK1850202
<b>Color</b>  <b>Product description</b>	<p>EAN:5708590379081</p>  <p>Gray (RAL 9006)</p> <p>The name INDIVO relates to the individual configuration of the products. Lifts are available for countertops of any length between 23.6" and 111.8".</p> <p>INDIVO lift for countertop, with three motors and control box. Max. load: 330 lbs including the countertop.  Incl. cross brace and two brackets.  Height adjustable up to 11.8" with switch or wired remote control.  For countertop length 23.6" - 39.4". Please indicate length and depth of countertop when ordering.  Excl. mounting kit.</p>
<b>Adjustability</b> <b>Adjustment height</b>  <b>Product capacity</b>  <b>Speed up</b>  <b>Noise level</b>	<p>Height adjustable</p> <p>11,82 inch</p> <p>Maximum load: 330 lbs, this includes the weight of the countertop. The load must be evenly distributed.</p> <p>Speed up: 0,79 inch/s  Speed down: 0,79 inch/s</p> <p>45 dB</p>
<b>Materials</b>  <b>Ergonomy</b>	<p>Lifting columns: Powder-coated steel  Cross brace: Aluminium  Brackets: Powder-coated steel</p> <p>An electric height-adjustable kitchen countertop is ideal in all situations where various users - both seated and standing - use the same kitchen. This is equally true in private homes as well as larger centers with common kitchen facilities such as group homes and care centers.</p>



# PRESSALIT®

<b>Product</b>	INDIVO lift for countertop 23.6" - 39.4"
<b>Item number</b>	RK1850202
<b>Features</b>	Lifts are height adjusted either via switches in the front edge or with a wired remote control.
<b>Actuator (motor)</b>	DL17 Deskline (Linak) 70N, IP22
<b>Control box</b>	CBD6S (Linak) IP22
<b>Wired remote control</b>	HB53 (Linak), IPX1
<b>Power consumption (maximum load)</b>	Power consumption by maximum load: 300 W Power consumption by standby: 2 W
<b>Warranty</b>	Pressalit makes a commitment to remedy material and manufacturing defects for a period of three years from the invoicing date.



# PRESSALIT®

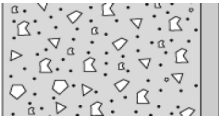
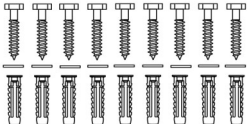

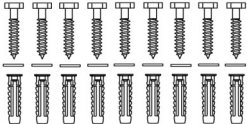
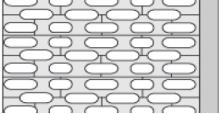
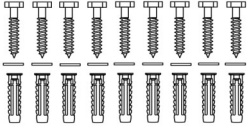
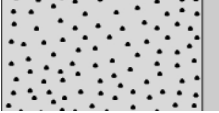
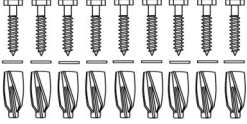
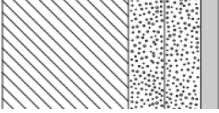
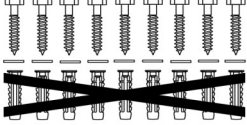
<b>Product</b>	INDIVO lift for countertop 23.6" - 39.4"
<b>Item number</b>	RK1850202
<b>Cleaning</b>	<p>This product should be cleaned with hot water or a mild cleaning solution. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p><b>DISINFECTANTS:</b> Clinimax Difficil-S Erisan OXY+ Sprit (husholdningssprit) Suma Bac D10 Virkon Rodalon Desinfektionsspray Lysoformin Spezial CaviCide Sufanios Premium Tvättsprit 70%</p> <p><b>NON-DISINFECTANTS:</b> Suma Star free D1 Taski 100 Taski 200 Milizid Citro</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p><b>DECALCIFICATION OF ALUMINUM PARTS:</b> Pressalit recommends that water deposits (Calcium, lime etc.) be removed from wall tracks and other aluminum parts using a solution of three parts of 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts should be wiped over with a damp cloth wrung out in plain water.</p>
<b>Declaration of conformity</b>	<p>This product is solely intended for the US and Canada, and has no EU declaration of conformity.</p>



PRESSALIT®

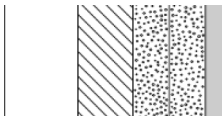
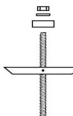

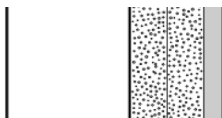





<b>Product</b>	INDIVO lift for countertop 23.6" - 39.4"
<b>Item number</b>	RK1850202

## Mounting in different wall types

	<p><b>Concrete &gt;B25</b></p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. To be ordered separately.</p> 
	<p><b>Solid Brick &gt;= Mz12</b></p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. To be ordered separately.</p> 
	<p><b>Solid Sand Lime Brick &gt;= Hlz12</b></p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. To be ordered separately.</p> 
	<p><b>Aerated Concrete P4</b></p> <p>V8657 - Mounting kit, 9 lag bolts M0.4" x 2.8" (Ø10 x 70 mm), plugs GB14. To be ordered separately.</p> 
	<p><b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with wood</b></p> <p>V8607 - Mounting kit, 9 lag bolts Ø 0.4" x 2.8" (Ø10 x 70 mm), plugs SX12. NB! Plugs are not needed. To be ordered separately.</p> 



# PRESSALIT®

<b>Product</b> <b>Item number</b>	INDIVO lift for countertop 23.6" - 39.4" RK1850202		
	<b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with 22 mm plywood</b> Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.		
	<b>Drywall (2 x 12,5 mm) water-resistant, re-enforced with steel plates (.08 inch)</b> Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.		
	<b>Drywall (2 x 12,5 mm) water-resistant</b> Wall fasteners (9 pcs) must be bought separately, for drywall it is possible to use e.g. SnapTight or WingIt anchors or similar.		

It is the responsibility of the installer to ensure that suitable wall fasteners are used.

[pressalit.com](http://pressalit.com)